


Test Control Panel

Having saved the Test Sequence File, it can now be run from the **Test Control Panel** window. This window is always in view and on top of all other open windows:

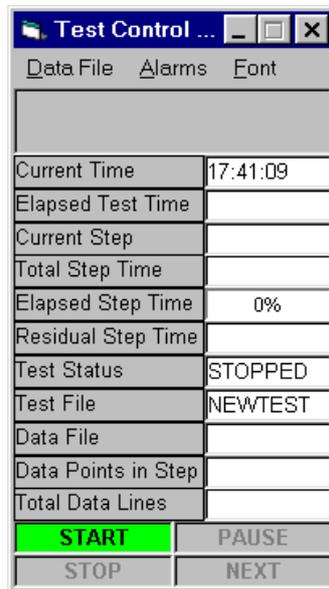

Data File

To create a Data File use **Open Data File** and type a new name and press Enter to accept. The Data File name will appear in the Data File box on the Control Panel.

View Data File in Excel provides a hot-link to Excel and offers a pick-list of available Data Files.

The default directory is C:\compendx\data and the data is stored as *.csv format (comma separated variables). This is recognised by Excel as a "native" file format and does not require the Import Wizard.

Alarms

The Alarms tool bar allows all alarms to be disabled. When disabled, a message appears in the field at the top of the Control Panel Window.

Font

This allows the user to adjust the Font Size of the text used in the Control Panel.